


DIGITAL WOODEN CLOCK

USER MANUAL

Main Features:

- Time Display Mode: 12 or 24 hour time display
- Calendar Mode: Display month and date
- Alarm Mode: Triple alarm time setting
- Temperature Mode: Range from 0°C - 50°C(32°F - 122°F)
- 3 Display Modes: dp-1,dp-2 and dp-3
- Power saving mode: Activate LED display by sound or touch
- Power supply: 3xAAA Batteries or USB Cable
3V built-in battery to keep time memory

FULL Screen Display

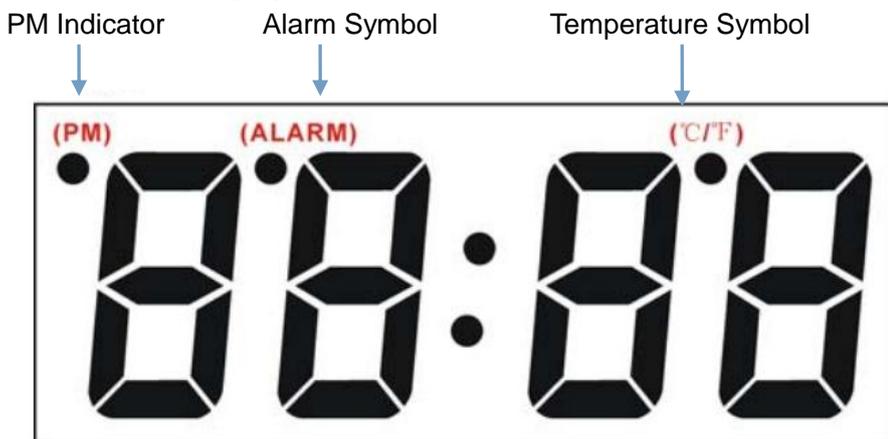

Operating Instructions:

After switching it on, the LED turns on with a beeping sound and the device will enter the time setting mode. Under time display mode, press the SET button to check below in sequence
Time --> Calendar --> A1(Alarm 1), A2(Alarm 2), A3(Alarm 3) --> Temperature

Time Setting:

1. Under the Time Mode, press and hold the SET button for 2seconds to set the clock.
2. Press the SET button repeatedly to set the time in the following sequence :
12/24hr switchover --> Hour --> Minute -->Exit
3. Press the UP/DOWN buttons to adjust the hour and minute digits. Press and hold the UP/DOWN buttons to speed up the scanning of the digits.
4. When the 12 hour format is set, the PM indicator on the top left corner will appear in the afternoon.
5. The setting mode will return to time display mode if there is no operation for 15 seconds.

Date Setting:

1. Under the Calendar Mode, press and hold the SET button for 2 seconds to set the date.
2. Press the SET button repeatedly to set the date in the following sequence:
Year -->month-->day-->Exit
3. Press the UP/DOWN buttons to adjust the year, month and date. Press and hold the UP/DOWN buttons to speed the scanning of the digits.

4. The setting mode will return to time display mode if there is no operation for 15 seconds.

Alarm Setting

There are 3 alarm time settings so you can store 3 different alarm times in the memory.

1. Under the Alarm Mode A1, press the UP button to turn the alarm on, press again to turn off.
2. When A1 is activated, 'oN A1' will appear on the display briefly then it will continue to display the alarm time.
3. Press the SET button for 2 seconds, the display will flash so you can set the alarm time.
4. Press the UP/DOWN buttons to adjust the alarm time. Press and hold the UP/DOWN button to speed up the scanning of the digits.
5. When the Alarm is activated, the Alarm Symbol will be displayed on the screen.
6. The setting mode will exit if there is no operation for 15 seconds.

*A2 and A3 alarm can be set in the same way as A1.

*Alarm will ring for 1 minute at the set time, press any button to stop the alarm. Please note the alarm symbol will stay on the display and will ring the next day at the same time unless deactivated in the alarm settings.

Temperature Display

*After switching it on, the clock will automatically detect the current room temperature and update the temperature every 60 seconds.

*Press the DOWN button for 2 seconds to switch between Celsius(°C)/Fahrenheit(°F).

Other Functions

Display Modes

Under clock, calendar or temperature mode, press the UP button to switch between Dp-1, Dp-2 and dP-3 display modes.

dp-1 mode: LED alternately displays time, date and temperature. Time will display for 10 seconds, date and temperature will display for 2 seconds each.

For example: press the UP button to enter the dp-1 Mode, after setting it return back to time display.

A. Under display mode, the LED display will alternate in the following sequence :

--> time(10 seconds) --> date(2 seconds) --> temperature(2 seconds)

B. Under power saving, press the control mode, the LED display will turn off after 10 seconds, make a loud noise or clap to turn the LED display on again in order to return to time display.

dp-2 mode: Set your desired mode and then keep it as display mode.

For example: press the UP button to enter to the dp-2 mode, after setting it return back to time display.

A. Press the SET button to enter the date display, and keep the display.

B. Then press the SET button to enter the alarm display, and keep the display.

C. Then press the SET button to enter the temperature display, and keep the display.

D. Under power saving, press the control mode, the LED display will turn off after 10 seconds, make a loud noise or clap to turn the LED display on again and keep the desired mode before LED turns off.

dp-3 mode: Default clock display, set your desired value **and quit or it will return back to display the time after 15 seconds if no action.**

For example: press the UP button to enter the dp-3 mode, after setting it return back to time display.

A. Press the SET button to enter the date display, after 10 seconds return back and keep as time display.

B. Then press the SET button to enter the alarm display, after 10 seconds return back and keep as time display.

C. Then press the SET button to enter the temperature display, after 10 seconds return back and keep as time display.

D. Under power saving, press the control mode, the LED display will turn off after 10 seconds, make a loud noise or clap to turn the LED display on again to show time display.

Power saving and Touch control mode

*The default mode is Sd (power saving off). Under Time Mode press the DOWN key to turn the Power Saving Mode on. The clock will then display 'oN Sd', press DOWN again to turn the Power Saving Mode off.

*Under Power Saving Mode, the LED display will automatically turn off without any operation for 10 seconds.

*Under Power Saving Mode touch the LED clock or touch the table to turn the LED display on again.

*Under Power Saving Mode when the alarm is ringing the LED display will automatically turn on.

Built in Time Memory

Built-in 1PC x CR2032 battery to keep the time running when power is off, but other functions cannot be used. If time memory doesn't work anymore, please replace the built-in battery behind the battery compartment.